
habitatpetenclosures.com.au
info@habitatpetenclosures.com.au

Assembly Instructions

1 x 2 Insulated Sloped Roof

Product Code : HR002

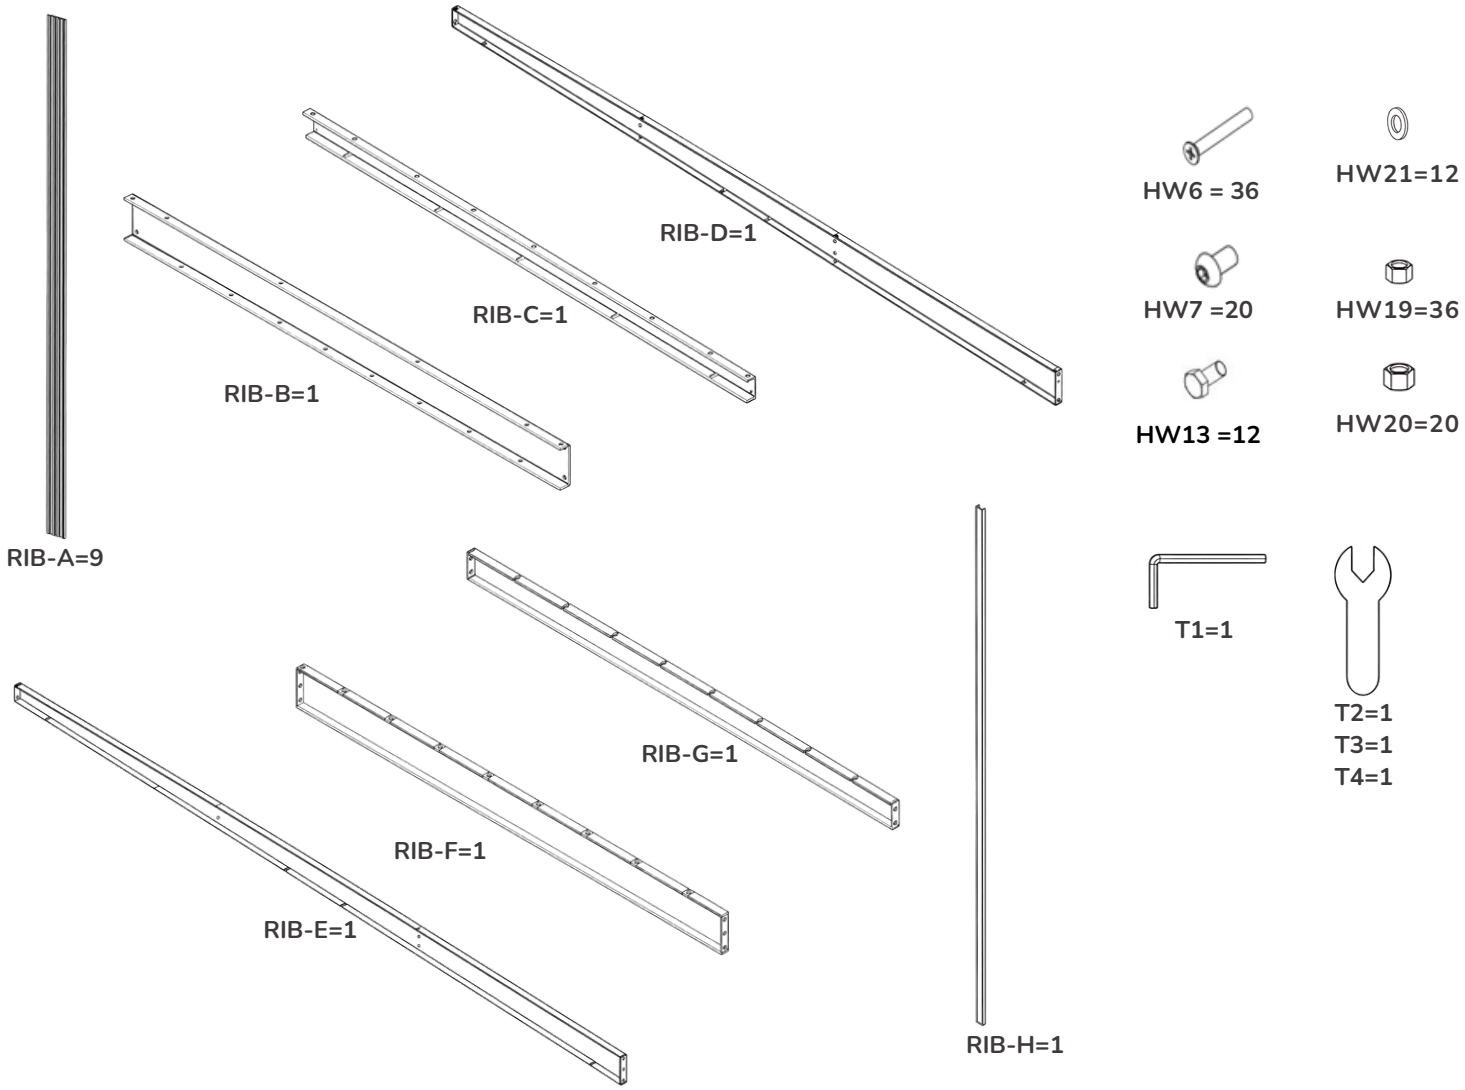

ROOFS COMPONENTS:

RIB-A Roof top sections
RIB-B Riser support bracket (high end)
RIB-C Riser support bracket (low end)
RIB-D Riser left support bracket
RIB-E Riser right support bracket
RIB-F Riser middle support bracket (high)
RIB-G Riser middle support bracket (low)
RIB-H Roof side cover

HARDWARE

HW6: Phillips Bolt M5x25
HW7: Allen Bolt M6x10
HW13 : Hex Bolt M8x15
HW21: Washer 8mm
HW19: Nut M5
HW20: Nut M6

TOOLS INCLUDED:

T1: Allen key
T2: Wrench 8mm (M5)
T3: Wrench 8mm (M6)
T4: Wrench 8mm (M8)

TOOLS NOT INCLUDED:


Phillips head screwdriver required

NOTE : HW13 and HW21 are for attaching the roof to the wall panels - save for later


Assemble Roof Stand

Step1: Use bolt (HW7) and nut (HW20) to assemble the parts (RIB-B/C/D/E/F/G).
Lay Left and right riser support brackets (RIB-D & E) upright, connect middle low and high support brackets (RIB-F & G) to left and right riser support brackets first.

1.1 : Connect high and low riser support brackets (RIB-B & C) at the corresponding ends.

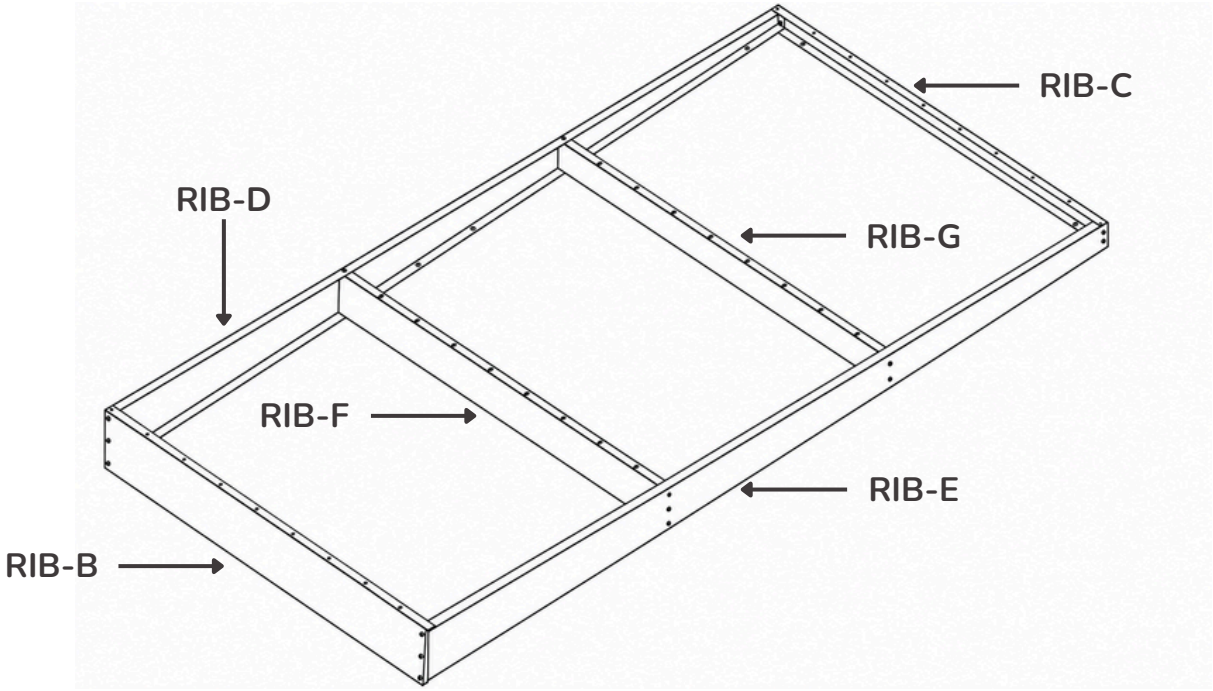

Step2: Place one section of roof top (RIB-A) on the roof stand, and fix with bolt (HW7) and nut (HW19). Repeat this in sequence until all roof top sections are attached.

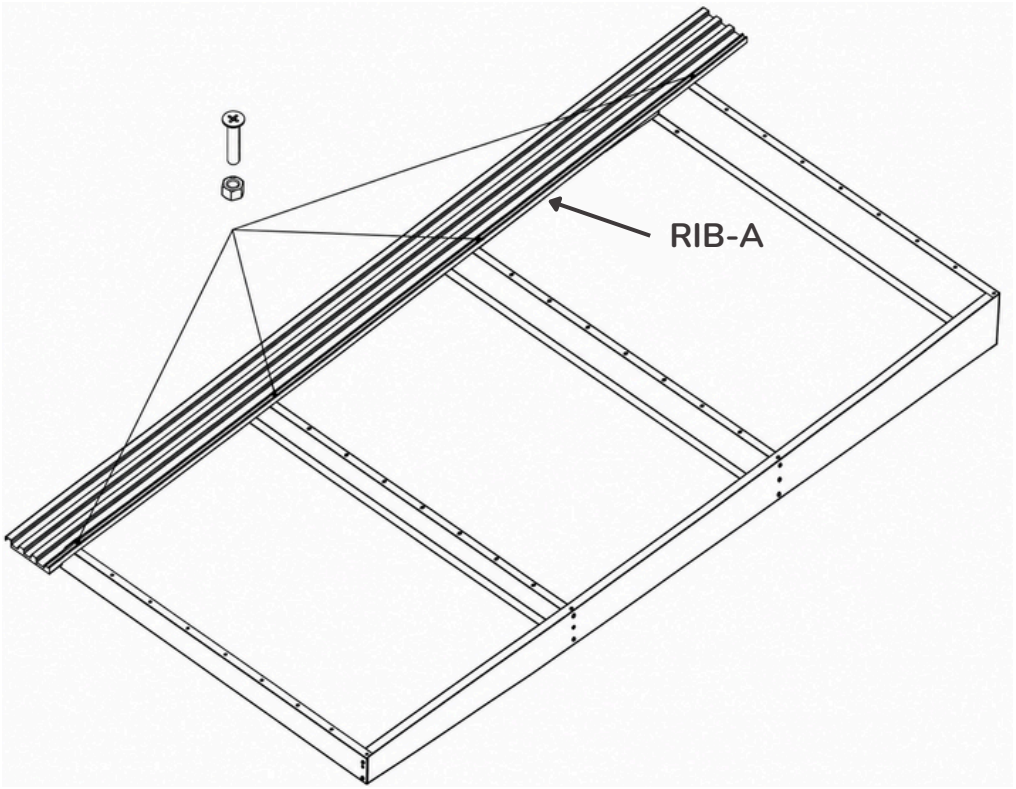

Step 3: Press side cover (RIB-H) onto the left side of the roof where screw holes are exposed to cover them. Place assembled roof to the side for later.

