

habitatpetenclosures.com.au
info@habitatpetenclosures.com.au

Assembly Instructions

Flat Wire Roof

Product Code : HR003/HR004

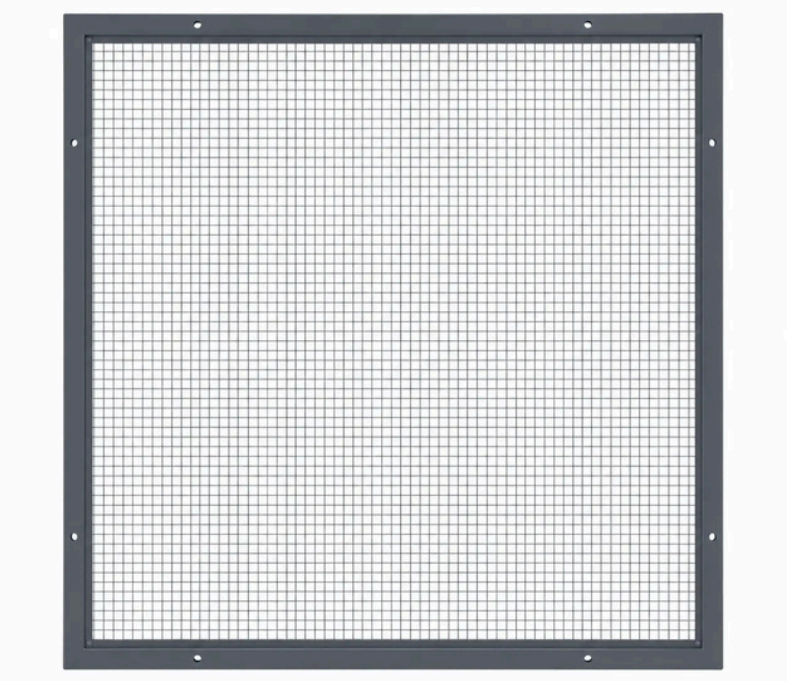

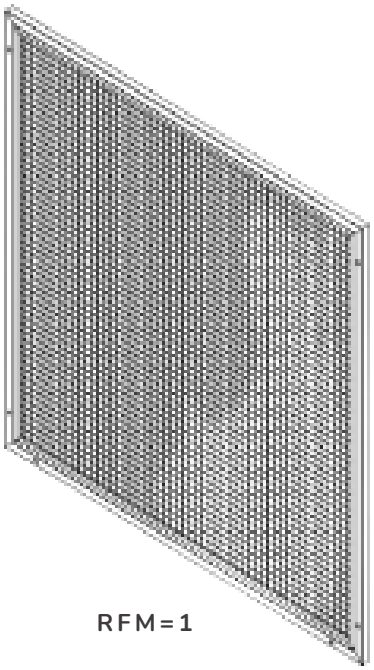

RFM=1



HW14=8



HW16=8



T1=1

PANEL

RFM: Flat wire roof

HARDWARE

HW14: Hex bolt M8 x 40mm

HW16: Washer 8mm

T4: Wrench 14mm

Step 1 - Fit the Flat Mesh Roof on the Wall Panels

Roof Orientation : the mounting holes on each side are different measurements from the edge of the frame. Length 1 is 225mm and Length 2 is 175mm. Place the roof in the direction so the larger spaced holes are at the front (door panel) and with the screw heads facing down. See diagram A below.

Place the flat mesh roof (RFM) on top on the wall/door panels . Use (HW13) bolt and washer (HW16) to fix the roof panel (RFM) to the wall panels.

