
habitatpetenclosures.com.au
info@habitatpetenclosures.com.au

Assembly Instructions


Concrete Former 1x1

Product Code : HCF001



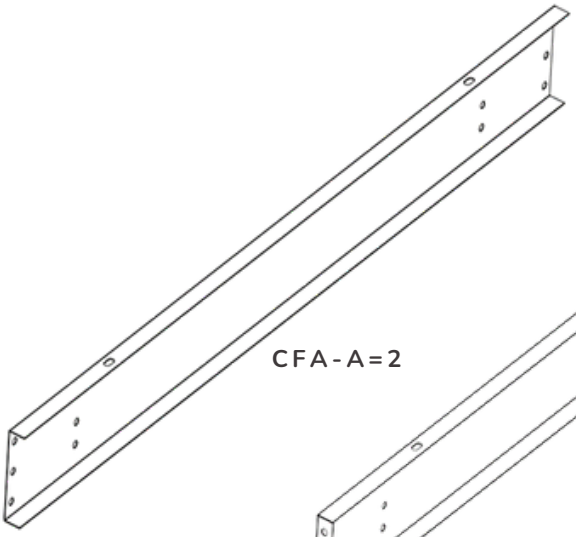

CFA-A=2

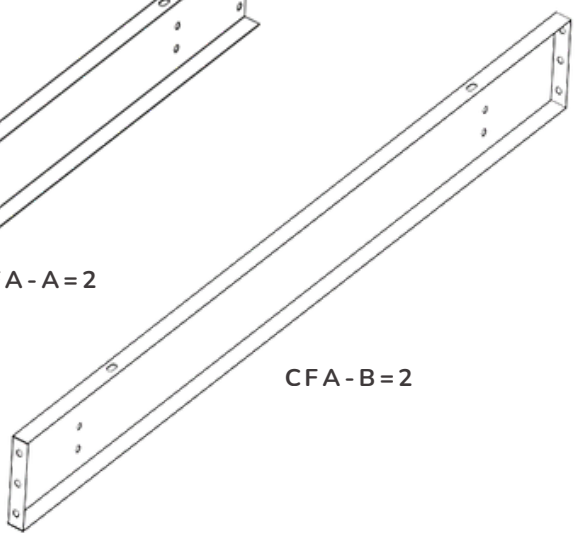

CFA-B=2



CFA-C=4



HW21=28



HW13=36



HW16=36



T4=1

FIXINGS:


CFA-A: Bracket
CFA-B: Bracket (U shape)
CFA-C: Corner brackets

TOOLS:

HW13: Hex Bolt M8x15mm
HW16: Washer 8mm
HW21: Nut M8
T4: Wrench 14mm


Step 1: Use bolt (HW13), washer (HW16) and nut (HW21) to attach bracket (CFA-A) to bracket (CFA-B).

Note : Bracket CFA-B is inserted inside bracket CFA-A. As shown in the diagram below. Repeat for all corners.

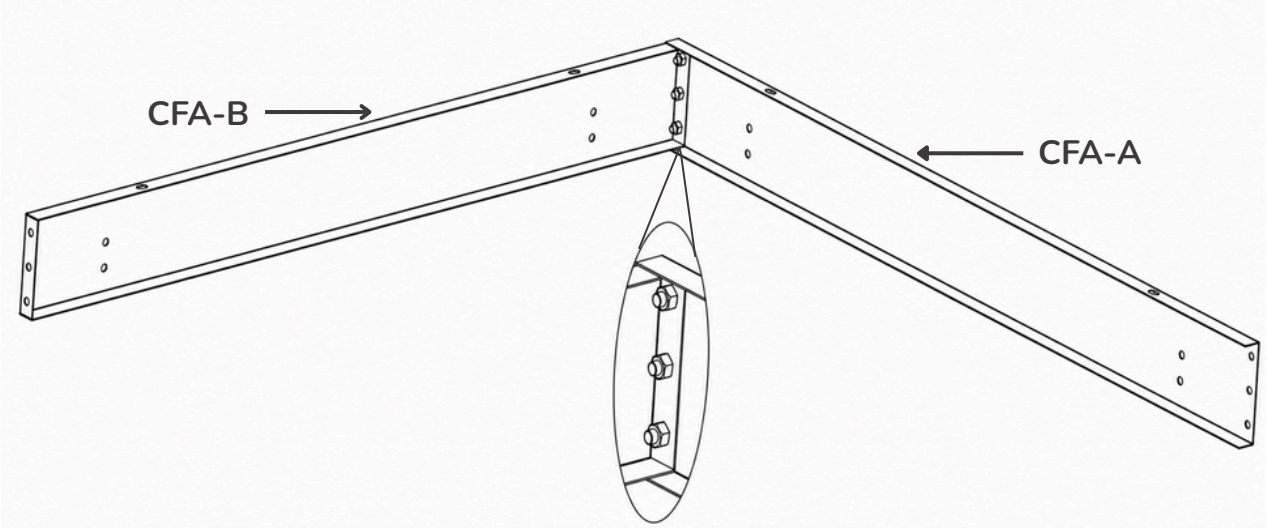

Step 2: Use bolt (HW13), washer (HW16) and nut (HW21) to to fasten corner brace (CFA-C).

Note : The corner brace can be attached with flat side facing up or down.

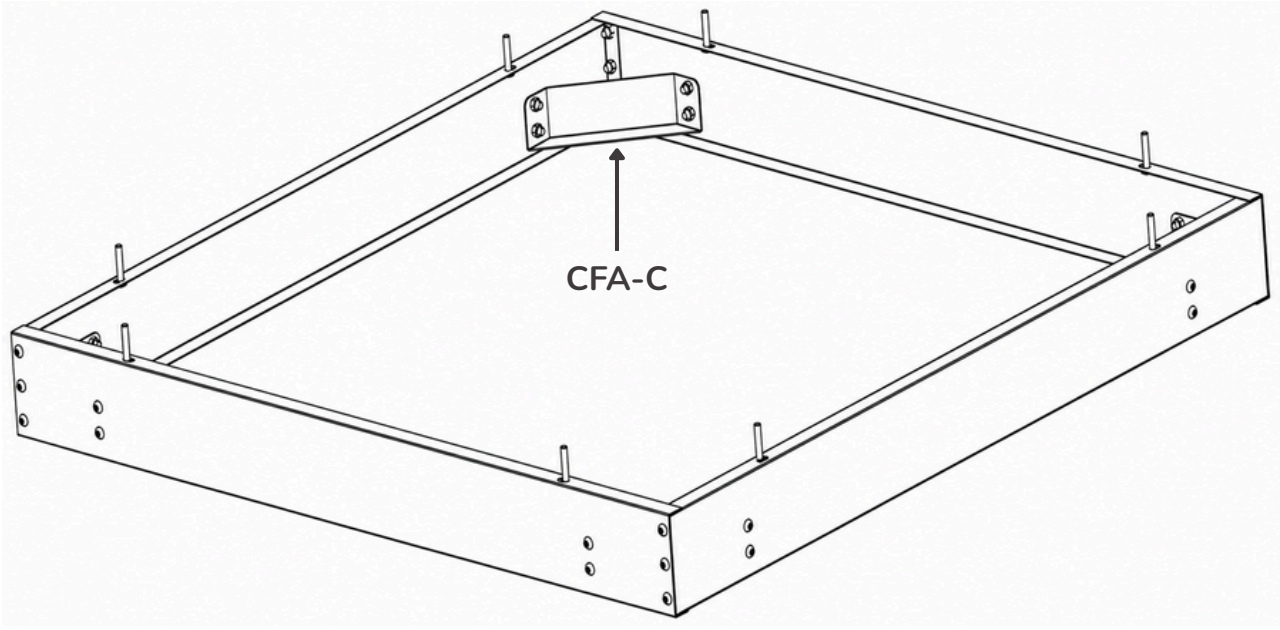

Step 3: Using bolt (HW13) and washer (HW16) install the walls of your enclosure on top of the concrete former.

Note : insert the bolt through the hole from the bottom so it is pointing up through the frame, as shown in the diagram.
Install the walls of the enclosure as per the wall assembly instructions.

