



habitatpetenclosures.com.au
info@habitatpetenclosures.com.au

Assembly Instructions
Concrete Former 2x1
Product Code : HCF004

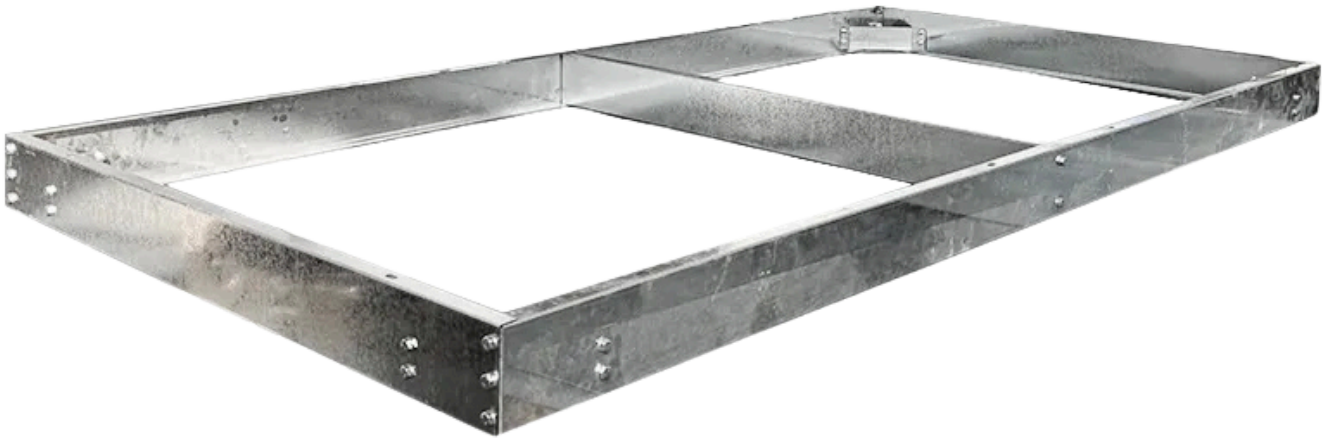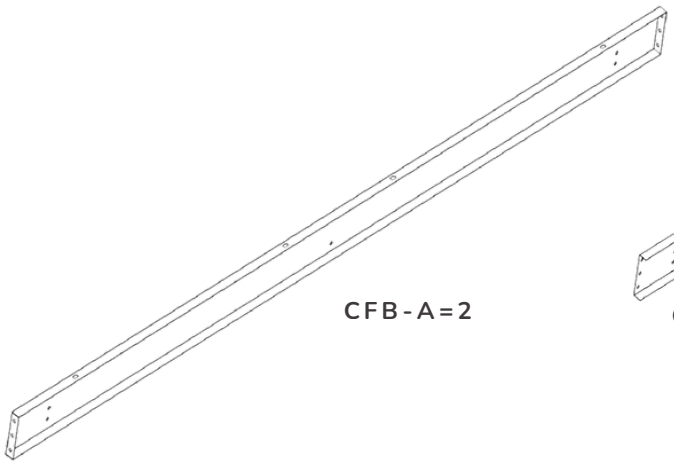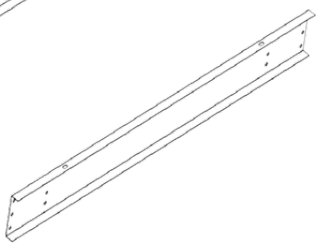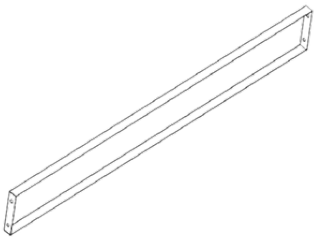


CFB-A=2


CFB-B=2


CFB-C=1


CFB-D=4


HW13=46


HW16=46



HW21=32



T4=1

FIXINGS:
CFB-A: Side Bracket
CFB-B: End Bracket
CFB-C: Middle support
CFB-D: Corner bracket


TOOLS:
HW13: Hex Bolt M8 15mm
HW16: Washer 8mm
HW21: Nut M8
T4: Wrench 14mm

Step 1: Use bolt (HW13), washer (HW16) and nut (HW21) to attach middle support (CFB-C) to side bracket (CFB-A) as shown in the diagram below. Repeat for the other side.

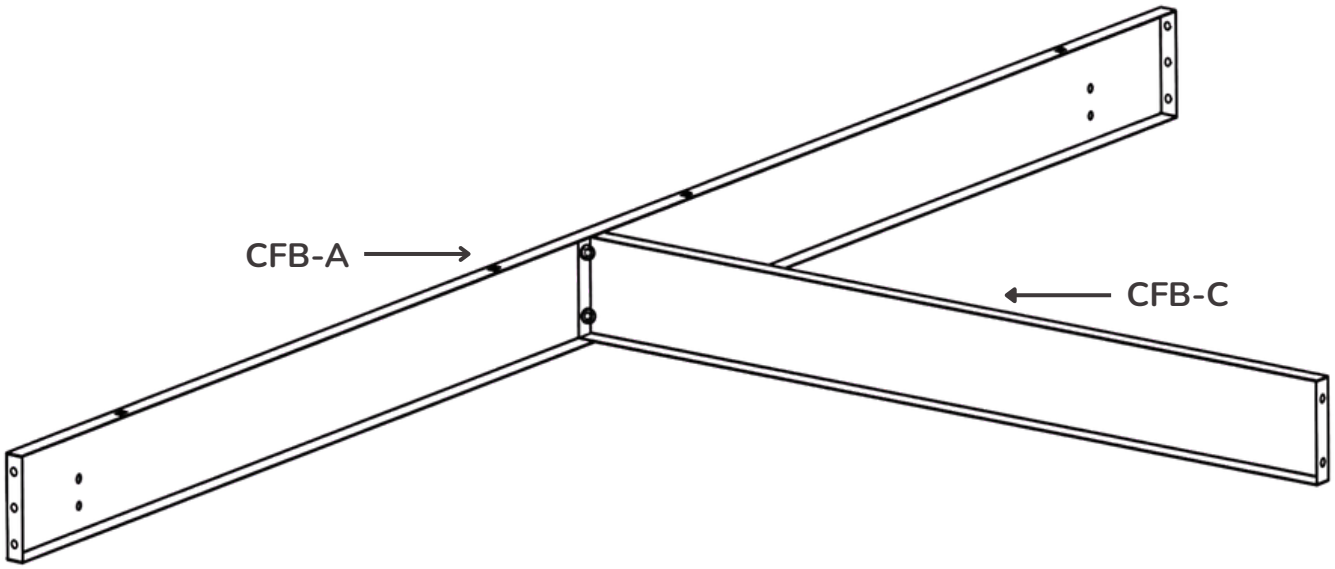


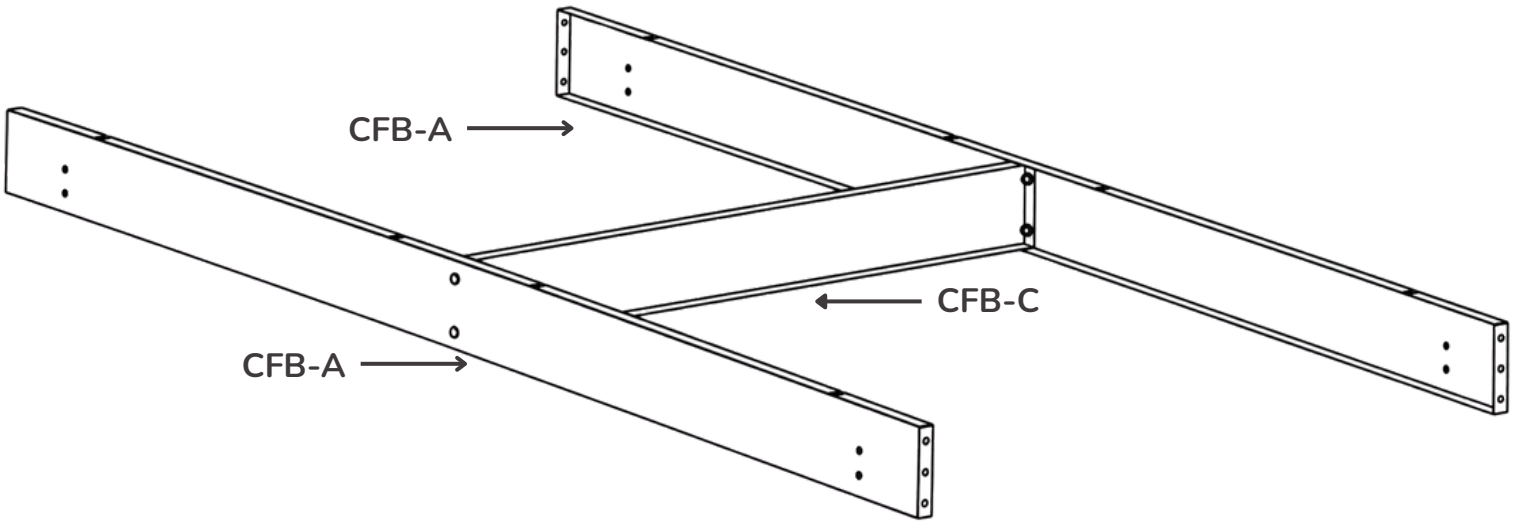

Step 2: Use bolt (HW13), washer (HW16) and nut (HW21) to attach end brackets (CFB-B) to side brackets (CFB-A). Note : Bracket CFB-A is inserted inside bracket CFB-B. As shown in the diagram below. Repeat for all corners.

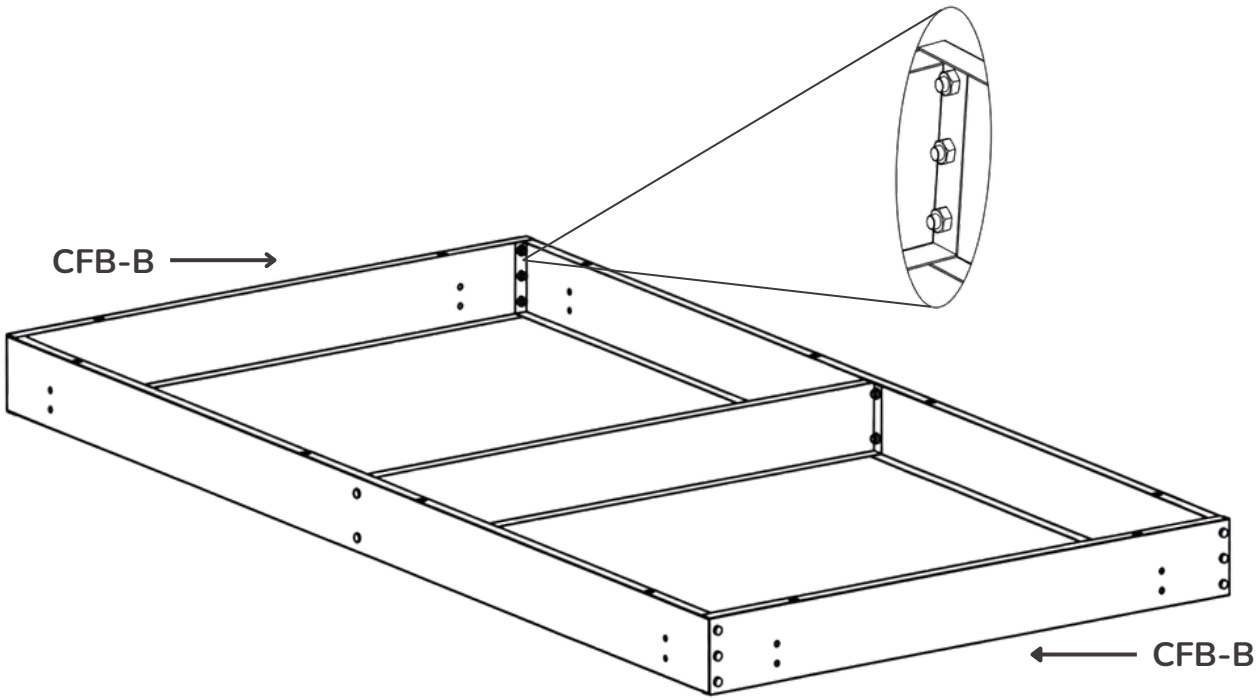

Step 3: Use bolt (HW13), washer (HW16) and nut (HW21) to fasten corner bracket (CFB-D). Note : corner bracket can be installed with flat side facing up or down.

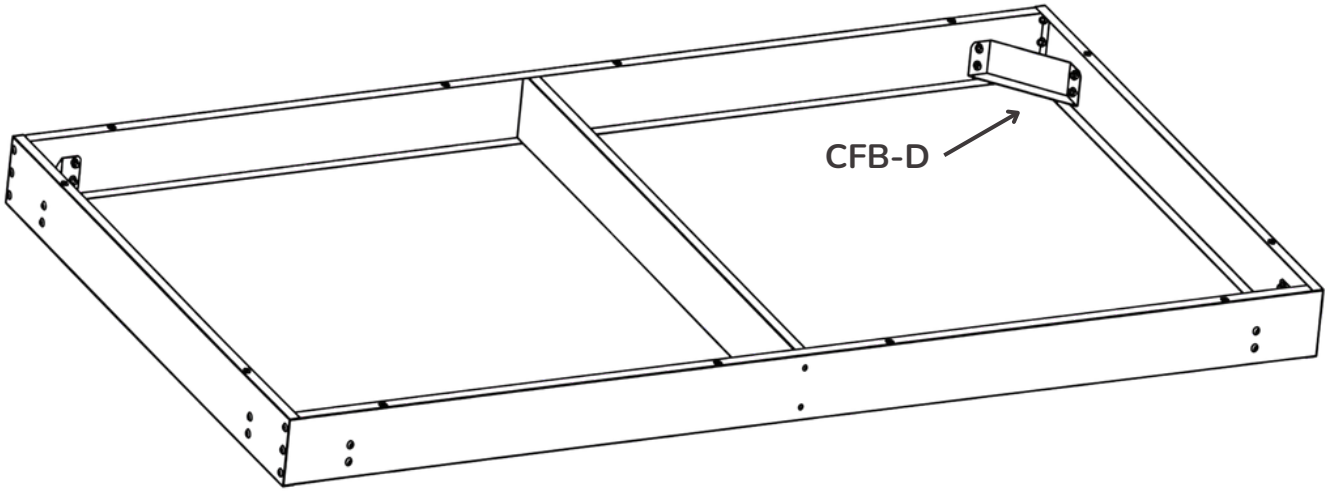

Step 4: Use bolt (HW13) and washer (HW16) to install the walls of your enclosure on top of the concrete former. Note : insert the bolt through the hole from the bottom so it is pointing up through the frame, as shown in the diagram below.

Install the walls of the enclosure as per the wall assembly instructions.

